

PRODUCT DATASHEET

Rosemount[™] 3900/3900VP

General Purpose pH/ORP Sensors



High performance for your process pH/ORP needs

The Rosemount 3900 and 3900VP pH/ORP combination sensors are used for reliable pH or oxidation/reduction potential measurements of aqueous solutions in pipelines, open tanks, or ponds. Its robust sensor design allows the Rosemount 3900 and 3900VP sensors to be used in a wide range of applications.



Overview



A Robust Sensor Design

- Extended sensor life and protection against poisoning ions using a double junction reference.
- Enhanced performance and increased life with cracking resistant glass.
- Maximum chemical resistance provided by a rugged polyphenylene sulfide body.
- Operates in sub-zero temperatures down to 14 °F (-10 °C).
- Built-in solution ground for advanced diagnostics.

Versatile Installation Options

- The sensor body features a one-piece construction with both front facing and rear facing process threads.
- ¾ in. and 1 in. MNPT process connections to meet a variety of application installation requirements.
- Variopol (VP8) cable connection option, for quick cable-to-sensor release, eliminates cable twisting.

SMART Preamplifier

- Automatic recognition of pH sensors by Rosemount transmitters: 1066, 1057, 1056, and 56
- pH calibration data is stored which allows sensors to be calibrated in advance for "Plug and Play" installations in the field.

Contents

Overview	Product Certifications5
Ordering Information	Dimensional and Installation Drawings6
Specifications4	Accessories11

Ordering Information



The Rosemount 3900 and 3900VP General Purpose pH/ORP Sensors feature a chemically resistant Ryton plastic body, along with a built-in solution ground for advanced diagnostics and a Pt-100 RTD for temperature compensation. These sensors are available with either an integral cable connection (3900) or Variopol (VP8) connector (3900VP). Variopol cables are sold separately (see Accessories).

Table 1. Rosemount 3900 pH/ORP Sensor ordering information

Model	Sensor Type		
3900	pH/ORP sensor		
Preamplifier Option			
01	Preamplifier (1)		
02	No preamplifier (2)		
Measuring Electrode			
10	General Purpose Low Resistivity (GPLR) pH glass		
12	Platinum ORP		
Typical Model Number: 3900-01-10			

- 1. Preamplifier is SMART with -10 option and a standard preamplifier if with -12 option. Comes with 32 ft. (10 m) of integral cable.
- 2. Comes standard with 15 ft. (4.7 m) of integral cable.

Table 2. Rosemount 3900VP pH/ORP Sensor with Variopol cable connection ordering information

Model	Sensor Type		
3900VP	pH/ORP sensor		
Preamplifier Option			
01	Preamplifier (1)		
02	No preamplifier		
Measuring Electrode			
10	General Purpose Low Resistivity (GPLR) pH glass		
12	Platinum ORP		
Typical Model Number: 3900VP-01-10			

^{1.} Preamplifier is SMART with -10 option and a standard preamplifier if with -12 option.

Specifications

Table 3. Percent linearity over pH range

pH Range	0-7	1-7	4-7	7-10	7-12	7-13	7-14
Linearity	97%	98%	98%	99%	97%	96%	95%

Measurement Ra	nge		
pН	0 to 14		
ORP	-1500 to +1500 mV		
Operating Tempe	erature		
-10 to 100 °C (14 to	212°F), Automatic temperature compensation from -10 to 100°C (14 to 212°F)		
Maximum Pressu	re		
	[abs]) at 100 °C (212 °F) g up to 100 °C (212 °F)		
Materials of Cons	truction		
Sensor Body	Ryton - Polyphenylene Sulfide (PPS)		
O-ring	EPDM		
pH Electrode	Glass		
ORP Electrode	Glass, platinum		
Solution Ground	Stainless steel		
Reference Junction	PTFE (Teflon)		
Conductivity			
Responds to change be controlled to 2 Gl	s in pH at a minimum conductivity of $0.1~\mu\text{S/cm}$ when used with the low flow panel. The sample flow rate must PH (7.6 L/hr)		
Process Connecti	on		
Front Facing	¾ in. and 1 in. MNPT		
Rear Facing	1 in. MNPT		
Temperature Cor	npensation		
Pt-100			
Cable			
3900	32 ft (10m) cable with integral preamplifier; 15 ft (4.7m) cable without preamplifier		

Use 24281-XX, 2.5 ft (.8m) to 100 ft (31m) (see Accessories)

3900VP

Weight/Shipping Weight

0.45 kg/0.9 kg (1 lb/2 lb)

Product Certifications

IECEx

3900/3900VP without preamp (pH and ORP) – Ex ia IIC T4 Ga (-20 °C \leq Ta \leq +60 °C)

3900/3900VP with SMART preamp (pH only) – Ex ia IIC T4 Ga (-20 °C \leq Ta \leq +60 °C)

Per standards IEC60079-0: 2011, IEC 60079-11: 2011

ATEX

3900/3900VP without preamp (pH and ORP) – 6 II 1 G Ex ia IIC T4 Ga (-20 $^{\circ}$ C \leq Ta \leq +60 $^{\circ}$ C)

3900/3900VP with SMART preamp (pH only) – \bigcirc II 1 G Ex ia IIC T4 Ga (-20 °C ≤ Ta ≤ +60 °C)

Per standards EN 60079-0: 2012+A11:2013, EN 60079-11:2012

FM

3900/3900VP with SMART preamp (pH only), with standard preamp (ORP only), and without preamp (pH and ORP):

Intrinsically Safe for use in Class I, II, and III, Division 1, Groups A, B, C, D, E, F, and G; Temperature Class T6 Ta = -20 °C to +60 °C

Intrinsically Safe for use in Class I, Zone 0, AEx ia IIC T6 Ta = -20 °C to +60 °C

Nonincendive for use in Class I, Division 2, Groups A, B, C, and D; Temperature Class T6 Ta = -20 °C to +60 °C

Suitable for use in Class II and III, Division 2, Groups E, F, and G; Temperature Class T6 Ta = -20 °C to +60 °C Hazardous (Classified)

Locations

IS/I, III/I/ABCDEFG/T6 Ta = 60 °C - 1400332; Entity; I/O/AEx ia IIC/T6 Ta = 60 °C - 1400332; Entity; NI/I/2/ABCD/T6 Ta = 60 °C; S/II, III/2/EFG/T6 Ta = 60 °C

Per standards 3600:1998, 3610:2010, 3611:2044, 3810:2005

CSA

3900/3900VP with SMART preamp (pH only) – Intrinsically Safe:

Class I, Division 1, Groups ABCD; Class II, Division 1, Groups EFG; Class III; Class I, Division 2, Groups ABCD; Ambient temperature rating -20 °C to +60 °C; Ex ia IIC; T6

3900/3900VP without preamp (pH and ORP) – Intrinsically Safe and Non-Incendive:

Class I, Division 1, Groups ABCD; Class II, Division 1, Groups EFG; Class III; Class I, Division 2, Groups ABCD; Ex ia IIC; T6; Ambient temperature rating -20 °C to +60 °C: (Simple Apparatus)

Per standards C22.2 No. 142 – M1987, C22.2 No 157 – M1992, CAN/CSA E60079-0:07, CAN/CSA E60079-11:02, UL 50, UL 508, UL 913, UL 60079-0: 2005, UL 60079-11: 2002

Dimensional and Installation Drawings

Figure 1. Proper sensor installation orientation

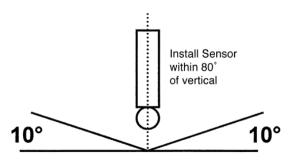


Figure 2. Dimensional Drawing for the Rosemount 3900/3900VP Sensor

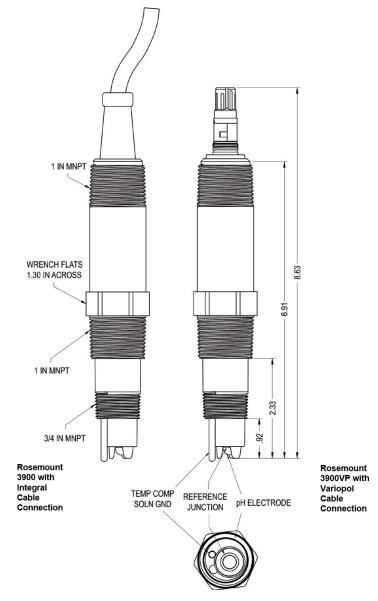


Table 5. Horizontal pipe tee (PN 2002011) pressure/temperature ratings

psig (kPa [abs])	°F (°C)
150 (1136)	150 (65)
128 (984)	160 (71)
102 (805)	170 (77)
80 (653)	180 (82)
57 (494)	200 (93)
48 (432)	210 (99)

Figure 3. Typical flow through insertion installation using PN 2002011 pipe tee

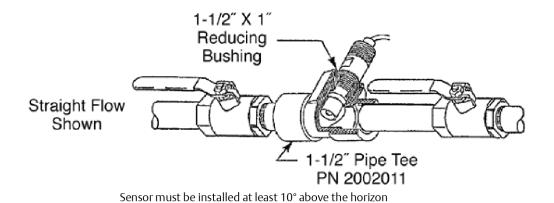


Table 6. Low flow cell specifications PN 24091-00/24091-02

Wetted Materials			
Body and nut	Polyester/Polycarbonate		
Fittings	316 SST		
Seals	Silicone		
Flow Cell Ratings			
Temperature	32 to 158 °F (0 to 70 °C)		
Maximum pressure	90 psig (721 kPa [abs])		
Flow Rate	2 to 5 GPH (7.6 to 18.9 LPH)		
Sensor Threaded Connection			
24091-00	1 in. NPT adapter		
24091-02	¾ in. NPT adapter		

Figure 4. Low flow cell PN 24091-00/24091-02


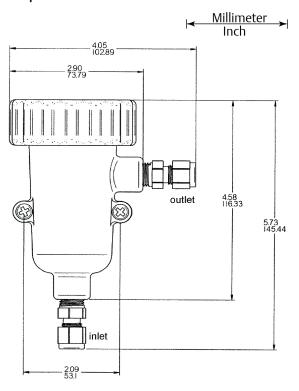


Figure 5. Flow-through tee (2 in.) (PN 915240-XX)

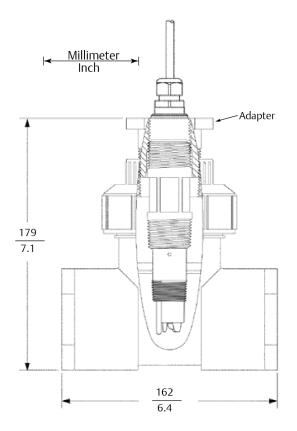


The following flow-through tees are available for the Rosemount 3900/3900VP:

- **915240-03**
- **915240-04**
- **915240-05**

For a new installation, use the appropriate tee above and add the S10283-LQD adapter.

When replacing an existing Rosemount 399 with a Rosemount 3900 sensor, add the S10283-LQD adapter to convert the tee to accept the Rosemount 3900 sensor.

Figure 6. Jet spray cleaner PN 12707-00

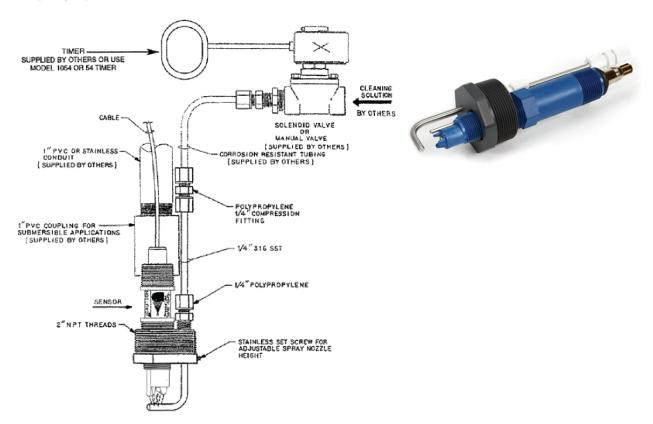

The jet spray cleaner eliminates routine, manual sensor maintenance by cleaning the sensor with water or compressed air. Flow through the cleaner can be controlled by a solenoid valve.

Note: The jet spray cleaner can be used with handrail mounting assembly (PN 11275-01, not shown) or can be mounted through conduit as shown above.

Figure 7. Low flow panel PN SQP10077-LQD

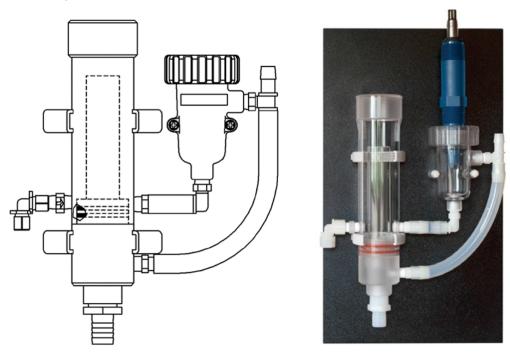


Table 7. Low flow panel specifications

Inlet flow	3-80 gph (11.4-304 L/hr)
Inlet pressure	3 – 65 psig (122 – 549 kPa abs)*
Temperature	32 - 122 °F (0 - 50 °C)

^(*) The minimum inlet pressure is required to open a check valve, which prevents the flow cell from draining if sample flow is lost. Removing the check valve lowers the inlet pressure requirement to a few feet of water head.

Accessories

Table 8. Rosemount 3900/3900VP pH/ORP Sensor accessories information

Part number	Description
24281-00	15 ft. cable with mating VP8 connector
24281-01	25 ft. cable with mating VP8 connector
24281-02	2.5 ft. cable with mating VP8 connector
24281-03	50 ft. cable with mating VP8 connector
24281-04	100 ft. cable with mating VP8 connector
24281-05	4 ft. cable with mating VP8 connector
24281-06	10 ft. cable with mating VP8 connector
24281-07	20 ft. cable with mating VP8 connector
24281-08	30 ft. cable with mating VP8 connector
12707-00	Jet spray cleaner
23242-02	Insertion mounting adapter, 1.5 in. MNPT process connection, 1 in. x ¾ in. FPT sensor adapter/union thread size
24091-00	Low flow cell, 1 in. NPT adapter
24091-02	Low flow cell, ¾ in. NPT adapter
23555-00	Weatherproof junction box, with preamplifier
2002011	CPVC In-line Tee, 1.5 in. size, 1.0 in. threaded process connection
11275-01	Handrail mounting assembly
9200273	11-Conductor extension cable, shielded and unprepped (for use with remote junction box)
915240-03	PVC flow through Tee, ¾ in. NPT process connection
915240-04	PVC flow through Tee, 1 in. NPT process connection
915240-05	PVC flow through Tee, 1-1/2 in. NPT process connection
9210012	Buffer solution, 4.01 pH, 16 oz
9210013	Buffer solution, 6.86 pH, 16 oz
9210014	Buffer solution, 9.18 pH, 16 oz
SQP10077-LQD	Low flow panel



Our offering:

Pressure Measurement		Level Measurement
Temperature Measurement		Flow Measurement
Marine Measurement & Analytical		Gas Analysis
Liquid Analysis		Flame and Gas Detection
Tank Gauging		Wireless Infrastructure
Acoustic & Discrete	HIGH A	CCURACY

LIQ-PDS-3900 June 2017

Global Headquarters

Emerson Automation Solutions

8200 Market Blvd Chanhassen, MN 55317

+1 800 999 9307 or +1 952 906 8888

+1 952 949 7001

Liquid.CSC@Emerson.com

North America Regional Office

Emerson Automation Solutions

8200 Market Blvd.

Chanhassen, MN 55317, USA

+1 800 999 9307 or +1 952 906 8888

+1 952 949 7001

RMT-NA.RCCRFQ@Emerson.com

Latin America Regional Office

Emerson Automation Solutions

1300 Concord Terrace, Suite 400 Sunrise, FL 33323, USA

+1 954 846 5030

+1 954 846 5121

RFQ.RMD-RCC@Emerson.com

Europe Regional Office

Emerson Automation Solutions GmbH

Neuhofstrasse 19a P.O. Box 1046 CH 6340 Baar Switzerland

+41 (0) 41 768 6111

+41 (0) 41 768 6300

RFQ.RMD-RCC@Emerson.com

Asia Pacific Regional Office

Emerson Automation Solutions Asia Pacific Pte Ltd

1 Pandan Crescent Singapore 128461

+65 6777 8211

65 6777 0947

Enquiries@AP.Emerson.com

Middle East and Africa Regional Office

Emerson Automation Solutions

Emerson FZE P.O. Box 17033, Jebel Ali Free Zone - South 2 Dubai, United Arab Emirates

+971 4 8118100

+971 4 8865465RFQ.RMTMEA@Emerson.com

Analyticexpert.com

in Linkedin.com/company/Emerson-Automation-Solutions

Twitter.com/Rosemount_News

Facebook.com/Rosemount

Youtube.com/user/RosemountMeasurement

S+ Google.com/+RosemountMeasurement

The Emerson logo is a trademark and service mark of Emerson Electric Co.

Rosemount and Rosemount logotype are trademarks of Emerson. All other marks are the property of their respective owners.

© 2017 Emerson. All rights reserved.

