

PRODUCT DATASHEET

Rosemount[™] 499ATrDO

Trace Dissolved Oxygen Sensor



A reliable sensor for measuring trace levels of dissolved oxygen

The RosemountTM 499ATrDO dissolved oxygen sensor is an easy to use amperometric sensor with a rugged construction. This sensor is ideal for measuring trace dissolved oxygen concentrations in steam power plants and in high purity cooling water.



Overview



Ease of Maintenance

- Extend sensor life with simple membrane and electrolyte replacement; no special tools required.
- Automatic temperature correction with integral Pt-100 RTD
- Easy in-air calibration
- Fast comedown time; an out-of-the-box 499ATrDO sensor is accurate at the 1 ppb level within five hours after being placed in service.
- Variopol (VP6) cable connector option eliminates cable twisting and allows for quick sensor replacement.

High Performance Design

- Measures dissolved oxygen concentrations between 0.1 ppb and 20 ppm.
- Operates in process temperatures up to 122 °F (50 °C).
- High accuracy of ±1.0 ppb when measuring at concentrations below 20 ppb.
- Internal flexible bladder allows automatic pressure equalization for minimal influence from pressure changes on sensor response.

Contents

Ordering Information	3
Sensor Specifications	Δ
Scried Specifications	
Accessories	- 6

Ordering Information



The Rosemount 499ATrDO dissolved oxygen sensor is ideal for measuring trace dissolved oxygen concentrations at the ppb level. The sensor is available with either an integral cable or Variopol (VP6) connector. Variopol cables are sold separately (see Accessories). Sensors come standard with three replacement membrane assemblies, three O-rings, and a 4 oz (125 mL) bottle of electrolyte. Sensors should be used with low flow cell (PN 24091-00).

Table 1. Rosemount 499ATrDO Dissolved Oxygen Sensor ordering information

Model	Sensor Type				
499ATrDO Dissolved Oxygen Sensor					
Transmitter Compatibility					
54 For use with Rosemount 1056, 56, 1066, and 5081 transmitters					

Table 2. Options

Cable Options				
-	No selection - standard 25 ft cable			
60	25 ft optimum EMI/RFI cable			
VP	Variopol (VP6) connector ¹			
Flow Cell Option				
70	Includes low flow cell (PN 24091-00)			
Typical Model Number: 499ATrDO-54-60-70				

^{1.} For use with VP interconnecting cables (see Accessories).

Specifications Sensor Specifications

Range: 0.1 ppb to 20 ppm

Wetted materials: Noryl¹, Viton², Teflon³ (TFE), and silicone

Cathode: Gold (not normally wetted)

Accuracy: Accuracy depends on the accuracy of the chemical

test used to calibrate the sensor.

Linearity: $\pm 5\%$ of reading or ± 3 ppb (whichever is greater) at

77 °F (25 °C)

Repeatability: ±2% of reading at constant temperature

Response time: <20 sec to 90% of final reading at 77 °F (25 °C)

(0 to 200 ppb oxygen)

Pressure: 0 to 65 psig (101 to 549 kPa abs)

Temperature: 32 to 122 °F (0 - 50 °C)

Membrane permeability correction: Defined between 41 and

113 °F (5 and 45 °C)

Process connection: 1 in. MNPT

Electrolyte volume: 25 mL (approx.)

Electrolyte life: 4 to 6 months (approx.)

Sensor life: 2 years (approx.)

Cable length (standard integral cable): 25 ft (7.6 m)

Cable length (maximum): 300 ft (91 m)

Accuracy at 77 °F (25 °C) following air calibration:

	< 20 ppb	±1 ppb
ſ	> 20 ppb	±5% of reading

Drift: <4% over 60 days

Sample flow: 1.6-6.3 gph (100-400 mL/min) recommended. Response changes less than 2% when flow is maintained at recommended range. At 0.8 gph (50 mL/min), sensor response is about 90% of value at 100 mL/min.

Comedown time to 1 ppb:

New sensor <5 hours

Following membrane change: <1 hour

Following air calibration: < 1 hour

Shelf life: 3 months. If the shelf life has been exceeded, the sensor can still be used. The comedown time will be longer.

Weight/shipping weight: 1 lb / 3 lb (0.5 kg / 1.5 kg)

Flow Cell Specifications

Low flow cell: PN 24091-00

Wetted parts: polycarbonate, polyester, 316 stainless steel,

and silicone

Process connection: 1/4-inch OD tubing compression fitting

or 1/4-inch FNPT

Maximum pressure: 90 psig (722 kPa abs)


Maximum temperature: 158 °F (70 °C)

Weight/shipping weight: 1 lb/2lb (0.5 kg/1.0 kg)

Note: The temperature and pressure specifications for the low

flow cell exceed the specifications for the sensor.

Figure 1. Rosemount 499ATrDO with Integral Cable Sensor dimensions

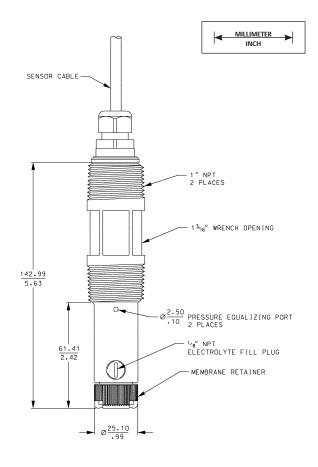


¹ Noryl is a registered trademark of General Electric.

² Viton is a registered trademark of E.I. duPont de Nemours & Co.


³ Teflon is a registered trademark of E.I. duPont de Nemours & Co.

Figure 2. Rosemount 499ATrDO with Variopol Cable Connection Sensor dimensions

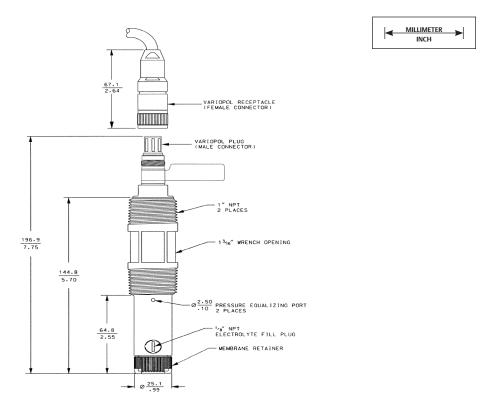

Length of assembled sensor is 9.3 in. (236 mm).

Figure 3 Low flow cell (PN 24091-00)

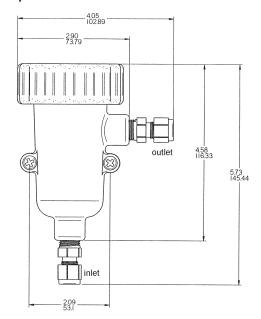



Accessories

Part#	Description
23747-06	Interconnecting cable, VP 6, 2.5 ft. (0.8 m)
23747-04	Interconnecting cable, VP 6, 4 ft. (1.2m)
23747-02	Interconnecting cable, VP 6, 10 ft. (3.0 m)
23747-07	Interconnecting cable, VP 6, 15 ft. (4.6 m)
23747-08	Interconnecting cable, VP 6, 20 ft. (6.1 m)
23747-09	Interconnecting cable, VP 6, 25 ft. (7.6 m)
23747-10	Interconnecting cable, VP 6, 30 ft. (9.1 m)
23747-03	Interconnecting cable, VP 6, 50 ft. (15.2 m)
23747-11	Interconnecting cable, VP 6, 100 ft. (30.5 m)
24091-00	Low flow cell
9390004	Rotameter: 0.5 - 5.0 gph
22550-00	Junction box without preamplifier
9200266	Extension cable, standard, unprepped
9200275	Extension cable, optimum EMI/RFI, unprepped
23747-00	Extension cable, optimum EMI/RFI cable, prepped
23501-04	Trace dissolved oxygen membrane kit: includes 1 membrane assembly and 1 O-ring.
23502-04	Trace dissolved oxygen membrane kit: includes 3 membrane assemblies and 3 O-rings
9210264	Dissolved oxygen sensor fill solution, 4 oz (125 mL)
33521-02	Membrane retainer
33523-00	Electrolyte fill plug
9390094	O-ring, Viton 2-014

Notes



Our offering:

Pressure Measurement		Level Measurement
Temperature Measurement		Flow Measurement
Marine Measurement & Analytical		Gas Analysis
Liquid Analysis		Flame and Gas Detection
Tank Gauging		Wireless Infrastructure
Acoustic & Discrete	HIGH ACCURACY measurement instruments	

www.Emerson.com/RosemountLiquidAnalysis



YouTube.com/user/RosemountMeasurement



Analyticexpert.com



Twitter.com/Rosemount_News



Facebook.com/Rosemount

Americas Emerson Automation Solutions 8200 Market Blvd Chanhassen, MN 55317 USA T + 1 800 999 9307 F + 1 952 949 7001

Liquid.CSC@Emerson.com

Europe
Emerson Automation Solutions AG
Neuhofstrasse 19a P.O. Box 1046
CH-6340 Baar
Switzerland
T + 41 (0) 41 768 6111
F + 41 (0) 41 768 6300
Liquid.CSC@Emerson.com

Middle East & Asia Emerson Automation Solutions Emerson FZE Jebel Ali Free Zone Dubai, UAE

P.O. Box 17033 T+971 48118100 F+971 48865465

Liquid.CSC@Emerson.com

Asia Pacific Emerson Automation Solutions 1 Pandan Crescent Singapore 128461 Singapore T + 65 777 8211 F + 65 777 0947 Liquid.CSC@Emerson.com

©2017 Emerson Automation Solutions. All rights reserved.

The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount and the Rosemount logotype are registered trademarks of Rosemount Inc. All other marks are the property of their respective owners.

The contents of this publication are presented for information purposes only, and while effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, expressed or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the designs or specifications of our products at any time without notice.



