



PRODUCT DATASHEET

www.high-accuracy.com

Hagan Sample Cooler Styles 374901-001 and 374901-002

- **Rugged Construction:** All-welded design results in long, trouble-free operation.
- **Corrosion Resistant:** Inconel coil and shell permit corrosion-free service even with salt water coolant.
- **Internal Cooling Baffle:** The internal baffle is arranged for maximum rate of heat transfer and low coolant pressure loss.
- **Convenient Installation:** Terminal connections are marked plainly to show cooling water and sample inlet and outlet connections. The permanently attached nameplate displays direction of flow and piping orientation.
- **Ease of Mounting:** Both screwed-end and welded-end designs are mounted by means of two convenient brackets. These are also suitable for mounting in the piping.



Sample Cooler with 1/2 in. screwed connections

Application

The Hagan Model 503 Sample Cooler is an efficient counterflow heat exchanger designed for cooling high temperature, high pressure fluid samples such as boiler water, steam, feedwater and hot chemical solutions for tests at atmospheric pressure and temperature.

Operation


The Hagan Model 503 Sample Cooler (cooling coil) is a Pressure rating: 6000 psig at 750°F tube-in-shell design, counter-flow type heat exchanger Heat exchange area: 1 sq. ft. which mounts in a vertical position on wall brackets or in Hydrostatic test at the piping

High-temperature fluids are introduced at the top sample Shell maximum connection. Cooled samples are taken from the bottom

Cooling water, which must be flowing before the sample fluid is introduced at the bottom cooling water sample connection, exits in a counter-flow direction from the respective top connection.

Elevated temperatures and high pressures (above 750°F and 6000 psig) are accommodated by heat radiating piping and pressure breakdown valves upstream of the sample inlet. This equipment is provided by others. Refer to Figure 1 for heat radiating piping requirements for limited temperature rating of 750°F at sample cooler.

Figure 1

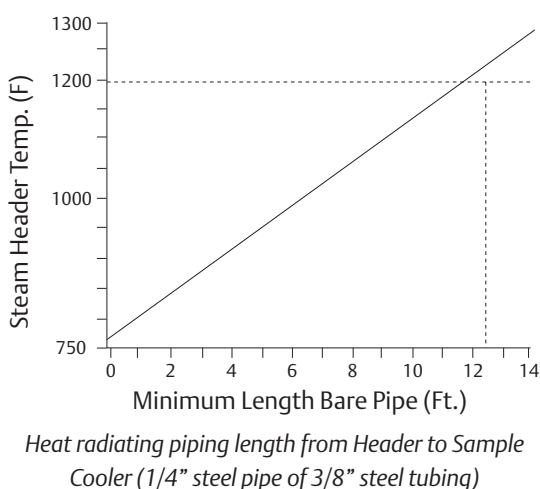

Specifications¹

Pressure Rating

6000 psig at 750°F

Heat Exchange Area

1 sq. ft.

Hydrostatic Test At Room Temperature

Coil: 9000 psig

Shell: 375 psig

Shell Maximum Working Pressure

250 psig

Water Flow Pressure Drop

Coil: 55 psig at 250 pph

Shell: 3 psig at 3 gpm

Overall Coefficient of Heat Transfer

390 BTU/hr./sq. ft./F

Inlet and Outlet Connections

Screwed-end design: 1/2 in. NPT male for sample, 1/2 in. NPT female for cooling water (Style 374901-001)

Welded-end design: 1/2 in. male (for use with 1/2 in. female welding socket) for sample; 1/2 in. NPT female for cooling water (Style 374901-002)

Weight

7 pounds, either design

Materials of Construction

Coil: Inconel

Shell: Inconel

Length of Heat Radiating 1/4 in. or 3/8 in. steel sample line tubing required to maintain 750°F at the Sample Cooler

See Figure 2

Upper Temperature Limit

Is a function of the temperature-pressure creep characteristics of the coil. At rated pressure, the short time upper limit is 1200°F.

¹ Although pressure vessels of this capacity and dimension are specifically exempted from the ASME Boiler Code, the assembly was designed according to the code UG-16, and the internal pressure limits were determined by code formula UG-27 (c) (1).

Sample Rate vs. Cooling Water Temperature¹


Fluid Sample	Pressure (psig)	Temp. (°F)	Sample Rate (pph) ²	Cooling Water Required (gpm)
Steam	2000	1050	67	3.1
Steam	2000	Saturated	105	3.7
Steam	200	1050	58	2.7
Steam	200	Saturated	88	3.3
Hot Water	—	625	120	2.5
Hot Water	—	200	220	0.8

¹ Results are based on cooling water at 60°F and a sample outlet temperature of 100°F.

² Increased sample capacity is obtained by placing coils in series or parallel.

Suggested Installation

Figure 2

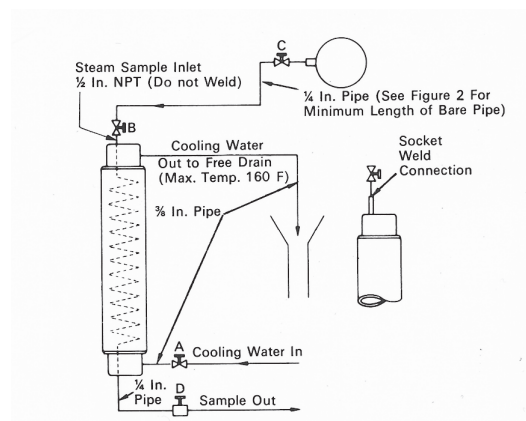


Suggested Initial Adjustments (Refer to Figure 2)

1. To start up:
 - a. Open cooling water valve "A"
 - b. With needle valve "D" closed, open valves "C" and "B".
 - c. Open needle valve "D" until sample temperature is approximately 77°F or 10°F above the cooling water temperature, whichever is higher.
 - d. The adjustment of valve "D" should not be changed after the initial setting is determined.
2. To Place in Service:
 - a. Open valve "A";
 - b. Open valve "B".
3. To Take Out of Service:
 - a. Close valve "B";
 - b. Close valve "A".

How to Order

1. Specify style number 374901-001 for screwed-end design.
- 2 Specify style number 374901-002 for welded-end design.

Dimensions in Inches

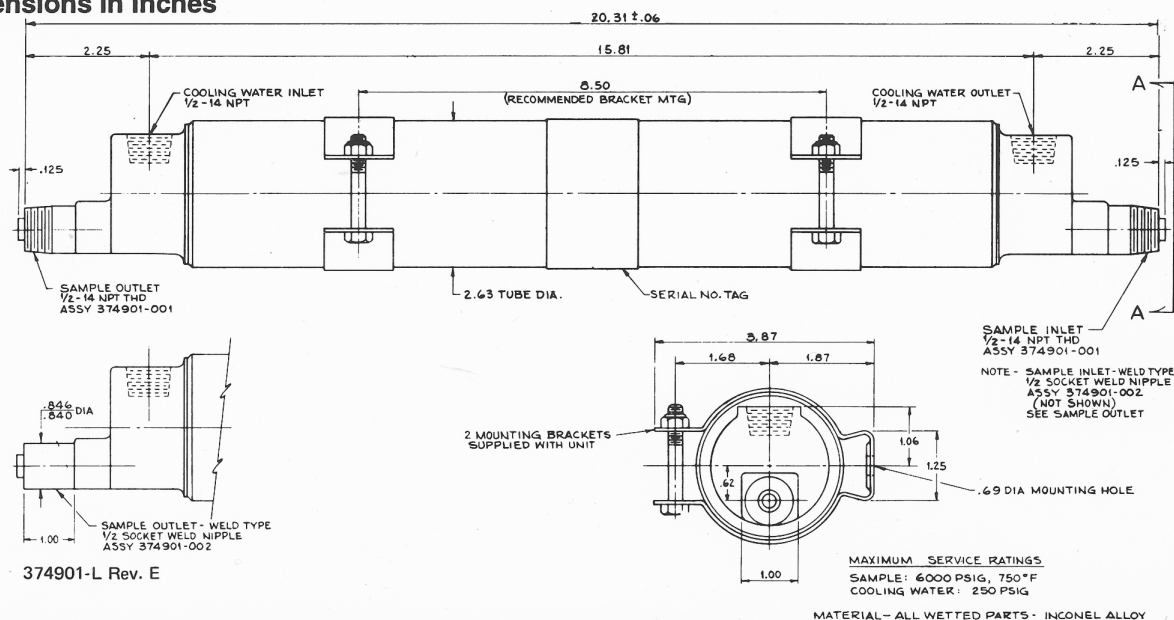

HA HIGH ACCURACY

m e a s u r e m e n t i n s t r u m e n t s

Our offering:

	Pressure Measurement		Level Measurement
	Temperature Measurement		Flow Measurement
	Marine Measurement & Analytical		Gas Analysis
	Liquid Analysis		Flame and Gas Detection
	Tank Gauging		Wireless Infrastructure
	Acoustic & Discrete		

www.high-accuracy.com

 www.facebook.com/EmersonRosemountAnalytical

 <http://www.analyticexpert.com>

 <https://twitter.com/raihome>

 <http://www.youtube.com/user/rosemountanalytical>

Scan this QR code to
learn more about the 503
Sample Cooler.



**Analytical Headquarters
Emerson Process Management
Rosemount Analytical**

Headquarters & Liquid Analytical
2400 Barranca Parkway
Irvine, CA 92606
United States
Phone: 1.800.854.8257
Fax: 1.949.474.7250

**Gas Chromatograph
Center of Excellence**

Emerson Process Management
Rosemount Analytical
10241 West Little York, Suite 200
Houston, Texas 77040
United States
Phone: 1.866.422.3683
Fax: 1.713.827.3865

Gas & Combustion Center of Excellence

Emerson Process Management
Rosemount Analytical
6565-P Davis Industrial Pkwy
Solon, OH 44139
United States
Phone: 1.800.433.6076
Fax: 1.440.914.1262

Latin America Center of Excellence

Emerson Process Management
111000 Brittmoore Park Drive
Houston, TX 77041
United States
Phone: 1.713.396.8759
Fax 1.713.827.3328

Europe Center of Excellence

Emerson Process Management AG
Blegistrasse 21
PO Box 1046
CH 6341 Baar
Switzerland
Phone: 41.41.768.6111
Fax: 41.41.761.8740

**Middle East and Afirca
Center of Excellence**

Emerson Process Management
Emerson Building
P.O. Box 17033
Jebe Ali Free Zone
Dubai, United Arab Emirates
Phone: +971.4.8835235
Fax: +971.2.8835312

Asia Pacific Center of Excellence

Emerson Process Management
Asia Pacific Private Ltd.
1 Pandan Crescent
Singapore 128461
Republic of Singapore
Phone: 65.6.777.8211
Fax: 65.6.777.0947

**Flame and Gas Detection
Center of Excellence**

Emerson Process Management
Net Safety Monitoring
2721 Hopewell Place N.E.
Calgary, AB T1Y 7J7 Canada
Phone: 1.403.219.0688
Phone: 1.866.347.3427
Fax: 1.403.219.0694
Safety.csc@emerson.com

© 2013 Emerson Process Management. All rights reserved.

The Emerson logo is a trademark and service mark of Emerson Electric Co. Brand name is a mark of one of the Emerson Process Management family of companies. All other marks are the property of their respective owners.

The contents of this publication are presented for information purposes only, and while effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the designs or specifications of our products at any time without notice.